


Ground Connections on the CMX Card

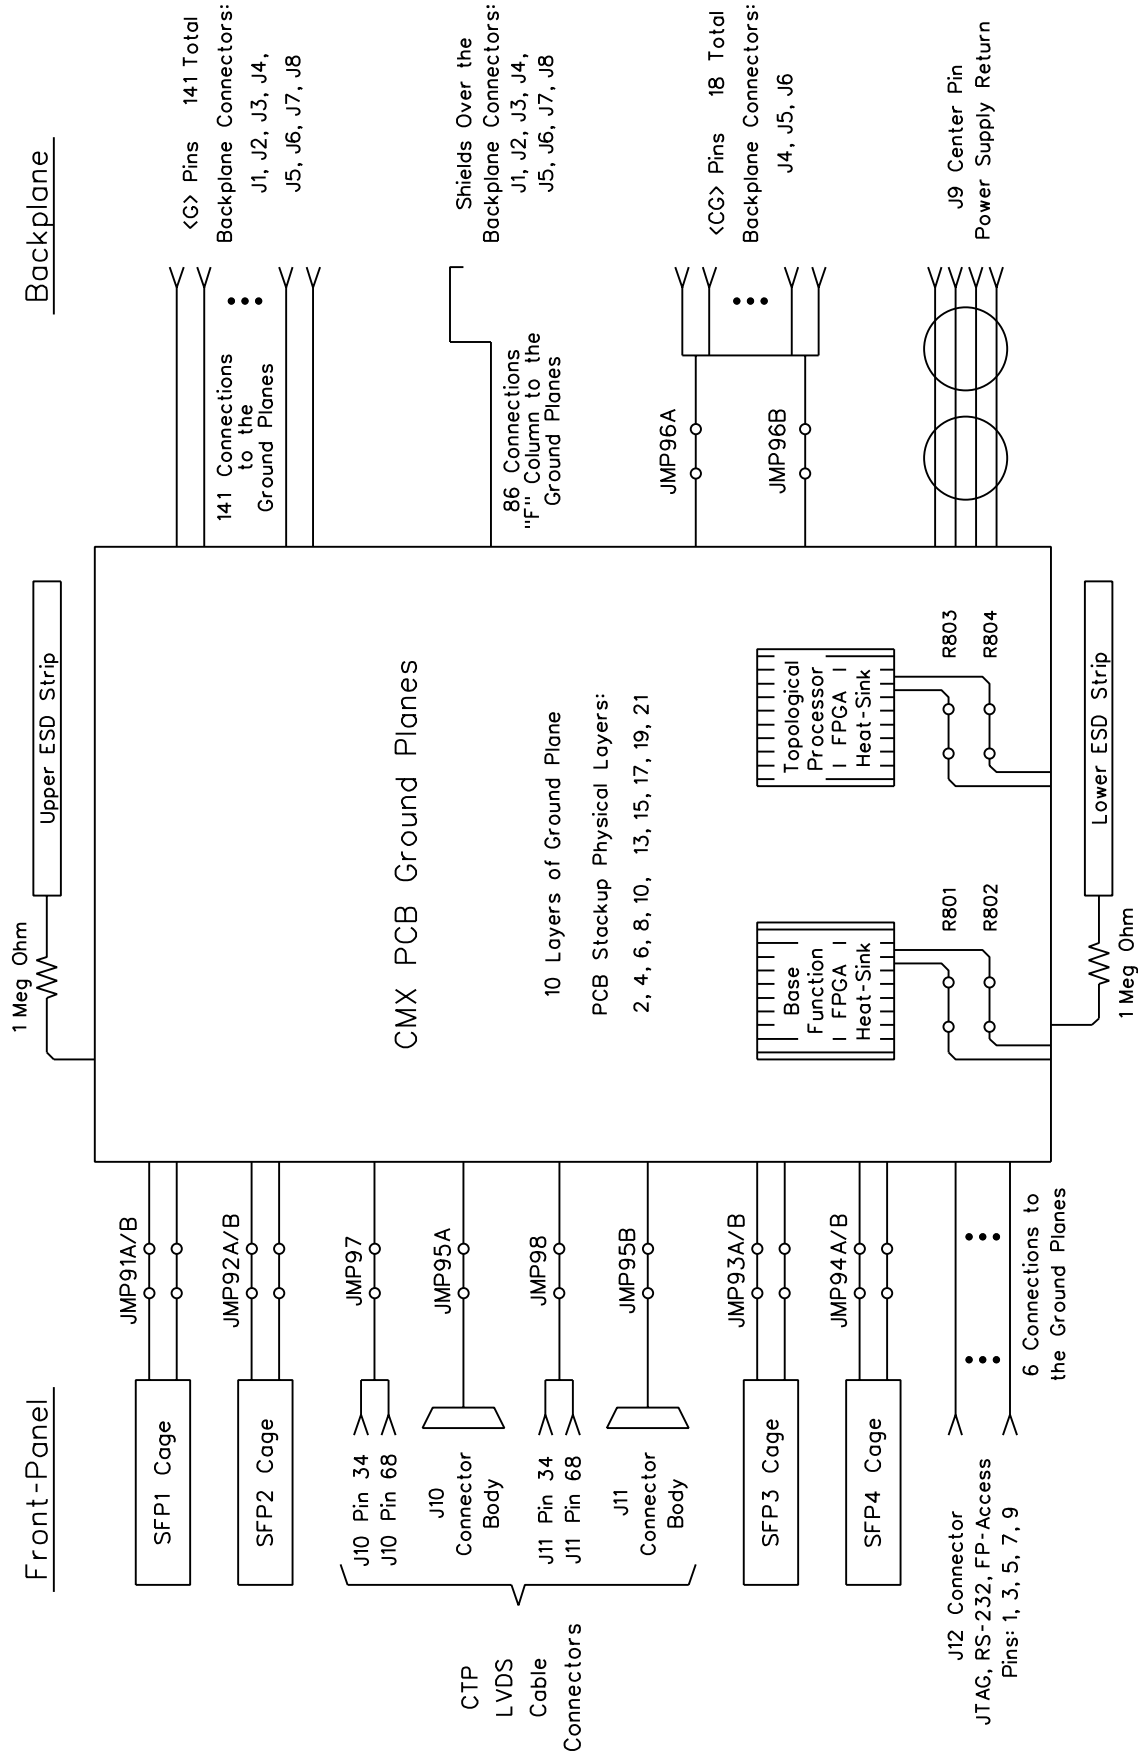

The front-panel, stiffener bars, and guide pin receptacle are electrically connected to the bodies of connectors J10 and J11. During assembly the SFP Cages may be electrically connected to or insulated from the front-panel.

All jumpers shown in this drawing may be: open circuits, Zero-Ohm jumpers, or appropriate value 0805 resistors as required to control ground loops.

Rev. 14-Aug-2013