

# Sputtering System - Remote Control Box

Remote Control Box "V" 10 t Pot: Sets the Target Voltage that is Provided by the Target Power Supply

Target PS "Voltage Control" 10 t Pot: No Function - Set to Zero

Remote Control Box "A" 10 t Pot: Sets the Anode (aka Plasma) Current Provided by the Fil-Anode Power Supply

Fil-Anode PS "Plasma Current" 10 t Pot: No Function - Set to Zero

Remote Control Box "V" Digital Meter: Shows the Target Voltage that is Provided by the Target Power Supply  
Its Reading Should Equal the Volt Meter on the Target Power Supply

Remote Control Box "A" Digital Meter: Shows the Target Current that is Provided by the Target Power Supply  
Its Reading Should Equal the Current Meter on the Target Power Supply