Assembly Manual Spartan IR Camera for the SOAR Telescope

Edwin D. Loh

Department of Physics & Astronomy Michigan State University, East Lansing, MI 48824

Loh@msu.edu 517 884-5612

09 October 2007

13 June 2008Modify procedure for assembling vacuum jacket16 May 2009Add drawing of motor board

Abstract

This manual describes disassembly and assembly of the Spartan Infrared Camera.

1 Safety of the instrument and personnel

1.1 Instrument as a bomb—keep the poppet free

When the instrument warms, the cryogenic charcoal getter may release a large quantity of gas, which vents through a poppet valve (Figure 12) if the internal pressure becomes high. Without the poppet, the instrument may become a bomb.

1.2 Don't open the instrument when cold

When venting the instrument to air, the instrument must be at ambient temperature. Venting when the temperature of the instrument is below the dew point will cause condensation and damage the rotation stages.

1.3 Recovery from lost vacuum

If vacuum is lost when the instrument is cold, the following procedure will prevent damage to the rotation stages. You must pump so that ice sublimates and does not liquefy. Liquid water will damage the lubricant on the rotation stages.

Close the leak. You have time: If the instrument is at 77 K, it will take days to warm up.

Attach a dry (oil-free) pump to the pumping port. Turn on the pump. After a minute, open the valve.

Pump until the instrument is a few degrees above ambient. You may want to turn on the heater to speed this up. See the section, "Warming up the instrument" in the Assembly Manual.

1.4 Fill liquid nitrogen in an open area

Cooling the instrument from ambient must be done in an open area to avoid asphyxiation, since the nitrogen displaces the air in a large $(8m \times 8m)$ room. Operating in a closed laboratory is acceptable, since the nitrogen in the cryostat, if it were to escape suddenly, would merely fill a $(3m \times 1m)$ closet.

1.5 Electrical—ground yourself

A detector can be damaged with electrical discharge from the body. The parts that have a direct connection with the detector are the detector card, the controller card, and the flexible cable. When working with these, use a wrist strap that is connected to ground. There is a copper wire on the instrument near the detector controller for grounding yourself.

1.6 Cleanliness

Keep oil from getting inside the vacuum enclosure. Use an oil-free pump. Wear gloves when handing the parts that go inside the instrument.

Keep dust from getting in the instrument. Work in a clean room.

1.7 Save your back—use a hoist

The instrument is heavy. Use the lifting jig or rotating jig to move or rotate the cryo-optical box. Use a hoist attached to the lifting bars (Figure 12) to move the instrument.

2 Warming the instrument

Before opening the instrument, you must warm it up to ambient temperature.

A record of the instrument warming up after Run 2 of Cold Test 3 (Figure 1) shows the temperature and pressure rising over the course of a few days. The instrument had been cold for 49 days. (The point at which time appeared to jump forward and backward an hour later is due to some software error having to do with the change to daylight savings time.)

For the first day, the temperature rose slowly, because radiation transferred heat. At 1.2 da, the temperature became high enough for the getter to release nitrogen and oxygen, and the pressure rose. Then molecular conduction became the dominant source of heat transfer, and the temperature rose rapidly. Around 1.6 da, the temperature rise slowed because the temperature difference decreased. After the heater was turned on at 2.0 da, the temperature rose with a steeper slope. Ini-



Figure 1: Pressure and temperature of the detector and heater as the instrument warmed up after run 3 of cold test 3. Liquid nitrogen was exhausted at t=0.

tially, the heater voltage was 80V. It was reduced to 50V at 2.3 da and turned off at 3.0 da.

With a heater, warming up the instrument takes 1–2 days. The heater is made of eight 47- Ω resistors mounted on the cryo-optical box. There are two parallel sets of four resisters in series. One resistor has a temperature sensor. The resistors run safely at a temperature of 70 C.

The maximum safe temperature of the cryo-optical box is unknown. We have not run it above 30 C.

Preparation

You need a variable transformer that can supply 0–120V and 150 W.

You need the power cord, which has an AC plug at one end and a female 19-pin connector at the other end. See Figure 2.

You must monitor the temperatures of the heater and the COB. SpartanGUI, PGauge,

and LogTempPressure must be running.

At a minimum, the flexible cable for the temperature sensors (the narrowest cable) must be plugged into the detector controller for channel 0. You may have all of the flexible cables plugged in.

Install the power to the heater. Disconnect the plug P19 of the motor cables (near the computer) from the receptacle Q19 and connect it to the heater cord.

Verify that the connection is correct. Measure the resistance between the two prongs of the AC plug that are not safety ground. The resistance should be about 90 Ω . If that is incorrect, try the other motor cable. Do not proceed unless the resistance is correct.



Figure 2: Power cord for the heater

Plug power cord into the variable transformer.

Set the voltage so that the temperature of the heater is less than 70 C. A good starting point is 80 V.

Monitor the heater temperature and turn the voltage down as the instrument warms up.

Monitor the instrument temperature. When the temperature of the nitrogen reservoir is a few degrees above the ambient, it is safe to open the instrument.

3 Disassembly

In order, the steps to disassemble the instrument are (1) removing the electronics, $\S3.1$, (2) removing the lid of the vacuum enclosure, $\S3.2$, (3) removing the cryo-optical box, $\S3.3$, (4) removing the insulating blanket, $\S3.4$, (5) opening the cryo-optical box, $\S3.5$, and (6) removing the assemblies, $\S3.6$.

3.1 Removing the electronics

Danger: The flexible cables are connected directly to the detectors. You may transfer the charge on your body via the flexible cables to the detector as a high voltage and damage the detectors. You must be grounded to the instrument.

Preparation You need 4 wide (30-pin) grounding plugs and 4 narrow (20-pin) shorting plugs. You need a wrist grounding strap.

Remove the cover of the electronics

Ground yourself. Attach your wrist to a ^{Fig} grounding strap, and clip the strap to the ^{ruff} wire on the bathtub near the vacuum bulkhead.

Figure 3: Flexible cable with shorting plugs and ruffle near the vacuum bulkhead

Remove a tray on an electronics box by removing the side and two screws on the front.

Unplug a flexible cable and plug it into a shorting plug (Figure 3). To release the black cable locks, use the nail on your index finger and brace your index finger against your thumb to control the motion. If pull on the locks directly, you will tear them out. Unplug the other flexible cables on the two free controller cards. The narrowest cable (10-pin) does not need a shorting plug.

Repeat to remove the flexible cables on the other two contrioller cards.

Is the detector safe? Verify that every flexible cable except for the narrowest (10-pin) cables has a shorting plugs on it.

3.2 Removing the lid of the vacuum enclosure

The instrument must have been warmed up to ambient temperature. See \S 2.

Preparation You will need lifting straps and the four feet for the vacuum lid.

Attach straps to the lifting rods. The instrument must be in the orientation shown in Figure 12.

Remove the bolts that connect the lid and bathtub, which are the two parts of the vacuum enclosure.

Lift and stow the lid. Tape a garbage bag to the vacuum side of the lid. Install feet on the corners of the lid (Figure 4). The feet protect the bottom surface of the lid. If the bottom surface is scratched, the vacuum will leak.



Figure 4: Vacuum lid showing a wood composite foot (gray). Shreds of the protective cover, a black barbage bag, show between the lid and foot.

Cover the instrument with a garbage bag to keep dust off.

3.3 Removing the cryo-optical box

Removing the cryo-optical box (COB) is delicate. You need to raise the 200-kg COB up from the vacuum bathtub without damaging the fragile flexible cables, which are initially attached to both and not visible.

Preparation You need a clean room, the COB lifting jig, a hoist, a lifting strap, and a wrist grounding strap.

Clean the lifting jig and enclose the hoist in a garbage bag to catch dirt that falls of the hoist.

Install the lifting jig. Install a strap between the lifting jig and the hoist. Screw in the 1/4-20 threaded rod into the A-to-C transitions (bottom panel of Figure 5). Level the lifting jig by adjusting the bolts.

Remove the four 5/16-18 bolts that hold the COB onto the A-frame struts.

Detach the fill and vent pipes at the nitrogen cryostat.

Detach the motor cable from the motor PCB.

Loosen the flexible cables. Unscrew the large nut that holds the vacuum bulkhead of the cables. Gently push the bulkheads in slightly.

Lift the COB a cm at a time. Make certain that the flexible cables are not caught. Although you cannot see the flexible cable between the COB and the bathtub, you can feel the vacuum bulkhead and verify that the cable is free. As you lift the COB, push the remaining flexible cable into the opening of the bathtub. When the cable is free, lift the COB out.

Cover the vacuum bathtub with a plastic sheet.





Figure 5: Top: lifting jig and hoist. Bottom: connection between the threaded rod of the lifting jig and the A-to-C transition on the COB.

3.4 Removing the insulating blanket

The multilayer insulation (MLI) blanket is in four pieces, a top, a bottom, and two side pieces. The pieces are taped and stitched together.

The starting poing for these instructions is that the COB is suspended on the lifting jig after lifting it from the bathtub. The back of the COB is up. (See Figure 14 for definitions of directions on the COB.)

Preparation You need three 6-in coffee cans to raise the COB off the table to provide access to bolts. You need the turning jig, the parts of which are a spreader bar, two offset plates, two 5-16 shoulder bolts, two strap guides, and two handles. In addition you need 4 cable ties.

Cut the tape and thread that hold the top bottom pieces of MLI at the front surface. Do not cut the tape and thread for the other surfaces.

Lower the COB onto a table so that the front is on the table.

Remove the lifting jig.

Install the turning jig. Attach the offset plates to the A-to-C transitions. Run a strap between shoulder bolts on the two offset plates and the spreader bar. Make certain that the strap guides are in place. Install cable ties to prevent the straps from slipping off the shoulder bolts. See Figure 6. Install the gray, wood-composite handles.

Remove the bottom piece of the blanket. Cut the tape and thread that hold it to the rest of the blanket. Lift the COB slightly to free the part of the blanket that is on the front of the COB. Put it in a garbage bag to keep it dust free.

Remove the top piece of the blanket in the same way.

Tape the side pieces of the blanket onto the COB.

Turn the COB so that the back is down. Lift it about 30 cm. Hold the gray, wood-composite handle so that you can control the rotation. The COB is slightly unbalanced.



Figure 6: Top: Spreader bar and offset plate of the turning jig. The cable tie keeps the strap on the spreader bar. Bottom: offset plate attached to the A-to-C transition. The strap guide and the cable tie prevent the strap from slipping off the black shoulder bolt. Lower the COB onto three coffee cans. The cans allow access to the bolts on the bottom. Make certain that the cans are not under the large bolts or motor wires.

You may remove the side pieces of MLI or you may want to keep them in place.

3.5 Opening the cryo-optical box



Figure 7: Lifting the top plate of the COB. The nylon screw lifts the top plate and frees it from the pin.

Preparation The COB is in the clean room with the bottom resting on three 6-in coffee cans on the table. See §3.4 for the procedure for lifting and turning the COB.

You need a 1/2in 6-32 nylon screw.

Remove the bolts on the top plate. There are sixty-some 6-32 screws that hold the top to the walls and about ten 10-24 screws that hold the nitrogen cryostat. In addition there are many 1/4-20 screws that hold the assemblies to the top plate. The top plate of the COB is now free.

Raising the top plate. Even though the top is free, the pins may make removal difficult. Use a 6-32 nylon screw to free the top from each of the four pins Figure 7). There is a tapped hole near each pin.

3.6 Removing assemblies

You may remove and reinsert the optical assemblies (Table 1) without realignment. Do not take apart an assembly. If you disassemble an assembly, you will have to realign the

assembly, which for some requires installing the parts with a precision of 5 μ m.

Unplug the motor cable from the motor card, if the assembly contains a mechanism. Make certain the the motor cable is freed from ties to the bottom plate of the COB.

Remove the bolts on the bottom plate. Because the assembly may not be balanced, one person must support it from the top while the other removes the bolts on the bottom.

Lift the assembly out of the COB. Be cafeful that you do not scrape any of the mirrors.

Assembly	Contents
Mask wheel	Mask wheel on a rotation stage
High-res collimator	High-res collimating mirror on an arm on a rotation stage
Wide-field collimator	Wide-field collimating mirror on a post
Fold-filter	Two fold mirrors on posts and two filter wheels on rotation stages
High-res focusing mirror	High-res focusing mirror on a post
Wide-field focusing mirror	Wide-field focusing mirror on an arm on a rotation stage
4-eye	Four detectors each on a tilting mechanism

Table 1: Optical assemblies

4 Assembly

4.1 General instructions

4.1.1 Wear gloves

Use gloves when handling parts that will be inside the vacuum enclosure.

4.1.2 Bolts

The bolts between the assembles the nitrogen reservoir are crit-	Size	Size Torque	
ical for proper cooling. Heat must transfer between the bolted		in-lb	N-m
joints. The bolts must be tightened with sufficient torque so that	4-40	5	0.6
when the aluminum part shrinks with respect to the stainless-	6-32	9	1.0
steel bolt, still enough force remains to press the parts together.	8-32	20	2
Tighten the bolts on (1) the rotation stages, (2) the rotation	10-32	30	3

stage cradles, (3) the shims on the assemblies, (4) the nitrogen reservoir, (5) the COB, (6) the heat straps on 4-eye, (7) the legs on 4-eye with the torque specified in Table 2.

Table 2: Bolting torque

70

7

1/4-20

The critical bolts must be lubricated with Dow Corning 321, which has graphite and MoS_2 in a suspension. To prepare these bolts:

Clean the bolts. Wash the bolts with soap and water. Clean them with alcohol.

Spray a scant amount of Dow Corning 321 onto the bolts. Turn the bolts and spray the other side.

Allow the coating to dry for 30 minutes. Then you may handle the bolts.

Allow the coating to cure for a day.

4.2 Assemblying 4 eye

See Assembling 4 eye¹

4.3 Installing 4-eye

See Installing 4 eye²

4.4 Installing the antibacklash mechanism on the wheels

The big filter wheel, little filter wheel, and mask wheel use an antibacklash mechanism having a torsional spring (Figure 8). The torsional spring has two legs and a helical section. Normally the helical section moves against an arbor, which causes sliding friction. Here the legs of the torsional spring are fixed to avoid having an arbor, and without an arbor there is no sliding friction. If the screws holding the legs work loose, the legs will move and produce metal filings.



Position the wheel at the most negative optic.

Figure 8: Arborless antibacklash mechanism for the wheels. The base is on the right.

Assemble the antibacklash mechanism. Put one leg of the torsional spring in the base and use a 6-32 screw to hold the leg. The screw must be tight so that the leg does not work free over time. Put the other leg in the top and screw it to the top.

Bolt the base to the cradle of the rotation stage with a 5/16-18 bolt. The bolt must be tight.

Wind the spring $1\frac{3}{8} \pm \frac{1}{8}$ turn counterclockwise and bolt it to the top to the wheel.

¹Loh, E., 2007, Installation of 4 Eye, Spartan IR Camera for the SOAR Telescope ²ibid.



4.5 Installing the motor & heater cabling

Figure 9: Side of the motor board facing away from the instrument to show the locations of the connectors.

Before closing the COB, check that you have plugged the motor and heater cables into the correct locations on the motor ciruit board.

Install the heater. The heater is made of two strings of four 47- Ω resistors. One string runs from the motor board to the left wall, and the other runs to the right wall. Attach the resistors to the COB by using the screws for the inner walls. Do not remove more screws than you need, since that may change the twist of the COB. Make certain that each resistor is tight, by trying to twist it. If a resistor is loose,

Mechanism	Color	Loc.
Big filter wheel	black	A1
Little filter wheel	white	A2
High-res coll.	green	A3
Wide-field cam.	blue	A4
Heater		B1
Mask wheel	yellow	B3

Table 3: Motor and heater cabling, color of identifier, and location on the motor circuit board.

it may become so hot that it overheats and damages the thermal blanket.

Plug in the motor and heater cables into the motor ciruit board according to Table 3.

Verify that the motors are connected properly. You need to connect the motor board to the cable on the Conflat plate and to connect it to the plugs near the computer. Run "test home" on each mechanism, which verifies that the mechanism moves and the reverse limit switch works.

Verify that the heater works. Disconnect the plug P18 of the motor cables (near the computer) from the receptacle Q18 and connect it to the heater cord (§2) Verify that the resistance between the two prongs of the power cord (not the safety ground) is 90 Ω .

Install the cover for the motor board. The cover prevents the connectors from loosening.



Wire the cover onto the motor board.

Figure 10: Left: Cover (the aluminum plate) for the motor board. Right: Double layers of aluminized Kapton covers the cold end of the motor board. The warm end, which has the wide cable, is uncovered.

4.6 Installing the insulating blanket

Preparation You need a roll of aluminized Kapton tape with 966 acrylic adhesive (Sheldahl 146385), teflon-coated fused silica thread (McMaster 6373K89), and a needle. The tape is made of the same material as the blanket, and the adhesive works at cryogenic temperatures. Use this tape only for the blanket, since a roll costs \$200.

Turn the COB so that the bottom is on top. (The motor wires are on the bottom.) See $\S3.4$ for instruction on turning the COB.

Install the front piece of blanket. Bring the flexible cables through the slits in the blanket. Temporarily tape the vacuum bulkhead onto the blanket to relieve tension on the flexible cables. Align the large opening in the blanket with the opening in the COB for the light beam. Tape the opening to the inside of the COB using four 6-mm wide strips of tape. Minimize the width of the tape to minimize conduction from the warm outside to the cold inside. Tape the cover for the mask wheel onto the blanket.

Install the back piece of blanket. Tape the front and back pieces together. Temporarily tape both pieces to the COB to hold them; use some inexpensive tape for this.

Install the bottom piece of blanket. Guide the motor and heater cables out through the opening in the blanket. Tape the slit for the nitrogen pipe by taping the innermost layer

together and the outermost layer together. Install the motor board. Plug in the motor and heater cables. Install the cover for the motor board. Tape the bottom to the sides. A small piece of tape every 30 cm is sufficient.

Turn the COB so that its top is up.

Install the top piece of blanket. Tape the top piece to the side pieces.

Adjust the taping to minimize the space between the blanket and the COB.

Sew the seams between the four pieces of blanket. With seams that were taped but not sewn, the pieces of blanket came apart, probably during evacuation, and allowed 300-K radiation to leak onto the detectors. A few stitches every 30 cm is sufficient.

Cover the motor board with a two layers of aluminized Kapton as shown in Figure 10.

4.7 Installing the cryo-optical box in the bathtub

The "A-to-C" transitions and A-struts transfer positioning between the cryooptical box and bathtub of the vacuum enclosure, and these are not interchangeable, since the particular combination compensates the fabrication errors. The location of the A-to-C transitions and A-struts are in Table 4.

This must be done in a clean room.

Preparation The multi-layer insulating blanket (MLI) is on the COB. Protuberances have been covered with MLI. The COB is resting on a table on the front face. (4) You will need a hoist. Make certain the hoist does not generate dirt.

COB face	Wire loc.	A-frame	A-to-C
Right	Back	4 c-bore out	4
Тор	Left	2 c'bore in	2
Left	Back	3 c'bore in	1
Bottom	Right	1 c'bore out	3

Table 4: A-frames and A-to-C transitions. "Wire location" specifies which groove in the bathtub has a locating wire. Column 3 specifies whether the face of the A-frame with the counterbore faces in toward the COB or out away from the COB. Example: A-to-C transition #4 is bolted on the right face of the COB, and attached to it is A-frame #4, with the counterbore out away from the COB and the locating pin on the back.

Enclosing the hoist (including the chain) in a plastic bag is a possible way to keep the instrument clean.

Install the Conflat plate with the motor wires and nitrogen pipes. Guide the motor cables and the nitrogen pipes into the holes in the flange of the bathtub.

Bolt the A-to-C transitions onto the COB. Three shim plates have pins; the fourth conforms.

Attach the lifting jig to the A-to-C transitions, and raise the COB with the hoist.

Loosely bolt the A-frames to the bathtub according to Table 2. Install one #18 solid copper wire in one groove of each A-frame to locate it. Because the A-frame that attaches to grooves 5 and 6 conforms to the other three A-frames, it does not need a locating wire.

Lower the COB so that the front is in the bathtub. Guide the flexible cables into the holes in the bathtub. Orient the detector cables so they are not twisted.

Lower the COB until the vacuum bulkhead seats in the bathtub. Attach the nuts.

Lower the COB onto the A-frames. Put 10% of the weight on the A-frames, and leave 90% on the hoist.

Install the nuts on the vacuum bulkheads of the detector cables.

Attach the 5/16-18 bolts between the A-frame and the A-to-C transitions.

Tighten the bolts on the A-frames. If the AtoC transitions were installed for the first time, loosen the bolts to the COB and then tighten them.

Attach the nitrogen pipes to the cryostat.

Attach the motor cables to the motor circuit board.

Install aluminized insulation over the protuberances (Table 5). On parts that have a thermal gradient (all parts except for the AtoC shims), radiation may short out the gradient. On such parts, keep the volume tight to minimize the radiative coupling between the warm and cool regions.

The ruffle (Figure 3) on the flexible cable is especially important. At ambient temperature, the vacuum bulkhead and the warm end of the flexible cable emit thermal radiation, the short wavelength tail of which can be seen by the detector. To make the problem worse, since the flexible cable must go to the detector, there is a path for the light also. The ruffle blocks this radiation.

Before Installation	During Installation
Wrap tubes.	Cover fitting at cold end.
Wrap board. Leave warm end exposed.	Cover cold end.
	Cover.
Wrap legs.	Cover cold end.
Wrap	Install ruffle.
	Wrap tubes. Wrap board. Leave warm end exposed. Wrap legs.

Table 5: Covering protuberances

5 Assembling the vacuum jacket

5.1 Window

The window retainer has an o-ring (Parker 2–175) between it and the bathtub and an o-ring (Parker 2–169) between it and the window.

If you tighten the screws holding the window, the window will crack. Air pressure, not the force of screws, holds the window tight against the o-ring.

Clean the o-ring channels in the window flange. Make certain that there are no fibers or hairs.

Apply vacuum grease to the o-ring between the window flange and the bathtub. Put a very small amount on your gloved finger and run the o-ring over it several times.

Install the window flange on the bathtub. Install #6 screws in every other hole (8 total). Tighten the screws evenly.

Apply vacuum grease to the o-ring between the window flange and the window.

Insert the window.

Position the window so that the gap between it and the window flange is even all around.

Install the window retainer. Install eight screws finger tight. *Do not tighten the screws; the window will crack*. Tighten the eight screws very slighly in a crossed circular pattern: Work on the screws in the order 1, 5, 3, 7, 8, 4, 6, and 2, where the screws are numbered 1–8 in clockwise order. Twist the shank of an allen wrench with your thumb and index fingers. Do not use the bend of the allen wrench, which will apply too much torque.

5.2 Conflat connections

The plumbing for the pumping port use 70-mm (2.75-in) Conflat fittings with copper gaskets (Lesker GA0275LB). The motor/nitrogen plate and the filter port use 152-mm (6-in) Conflat fittings with copper gaskets (Lesker GA0600).

Use gloves.

Clean the gasket and knife edge with alcohol.

Insert the copper gasket and install the bolts finger tight.

Tighten bolts in a crossed circular pattern 1/4 turn at a time until the torque is 16 N-m (12 ft-lb) for the 70-mm fitting and 20 N-m (15 ft-lb) for the 152-mm fitting.

5.3 Plumbing for nitrogen

The connections are 1/2-in VCR, which uses a metal gasket (either Swagelok CU-8-VCR-2-GR, a copper gasket, or SS-8-VCR-2-GR, a steel gasket).

Attach the gasket.

Make certain that the sections to be joined are aligned by wiggling them as you turn the nut with your finger. If they are aligned, you will not be able to wiggle them.

Tighten the nut finger tight.

Turn the nut 1/2 turn if using a copper gasket and 1/4 turn if using a steel gasket.

5.4 Vacuum enclosure

A large o-ring seals the joint between the vacuum lid and bathtub. The o-ring sits in a channel in the bathtub. Since the o-ring must seal against the flange on the bathtub, the flange must be kept free of scratches. It has wood-composite feet to keep it from getting scratched.

The o-ring is so large that we have had problems with hair and clothing fibers falling on it. Do not lean over the o-ring, and do not brush your sleeves against the o-ring. After we started to vacuum the o-ring and flange (See the procedure below.), we have not had any problems with leaks.

Preparation Put the bathtub on the floor in a clean room. Make a vacuum cleaner with a clean nozzle that can be positioned precisely: Attach Tygon tubing on a household vacuum cleaner

Clean the channel in the bathtub with a Kimwipe.

Clean the o-ring with a Kimwipe.

Apply vacuum grease to the o-ring. Put a small amount on your gloved finger and run the o-ring over it several times.

Install the o-ring in the channel.

Tape the blanket guard, a wire frame, to the blanket across from the opening for the pumping port. The blanket guard keeps the blanket from closing the pumping port.

Lift the vacuum lid with a hoist. Remove the wood-composite feet.

Lower the vacuum lid over the COB until the lid is 70 mm above the bathtub. Put 4-in bolts on the corners to keep the lid in place.

Vacuum the o-ring and flange while inspecting for dust. A flashlight helps to see specks of dust.

Lower the vacuum lid until it is 5 mm from the bathtub Make certain that you guide the lid so that it does not get scratched by the bathtub.

Bolt the lid onto the bathtub. Tighten the bolts gradually. The bathtub lifts up. In this way, the the lid and bathtub do not pinch the o-ring.

Torque the bolts tight If the bolts are not tight, the force of the air on the lid cannot transfer to the stronger bathtub.

5.5 Testing for leaks

Preparation You need a pump, a leak detector, and helium from a fine nozzle with a controlled flow.

Pump Connect the pump to the pumping port and pump until the pressure is within the range of the leak detector. Close the valve, and remove the pump.

Check for leaks. Test these points:

- 1. The joint between the vacuum bathtub and lid.
- 2. The seal for the window.
- 3. The joints on the vacuum plumbing near the pumping port, valve, and pressure gauge
- 4. The poppet valve.
- 5. The seal for the Conflat plate for nitrogen pipes and motor wires.
- 6. The seal for filter access.
- 7. The nitrogen pipes. Squirt helium into the fill/vent pipe. (Do this last, because helium in the nitrogen reservoir takes the longest to dissipate.)

6 Alignment of optical assemblies

Alignment of an optical assembly (Table 1) means to position the optic on two shims, which are pinned to the top and bottom plates of the COB. See Figure 11 for the shim of the filter-fold assembly. Alignment requirements, procedures, and results are in Alignment of the Optics³.



Figure 11: Shim, the shiny part, on the filter-fold assembly. The leftmost hole in the shim is one of two for pins that fix the position of the assembly on the top plate of the COB.

³Baker, D., & Loh, E., 2007, Alignment of the Optics, Spartan IR Camera for the SOAR Telescope

A Instrument description

The Spartan Infrared Camera (Figure 12) operates in the 1-2.4 μ spectral band. It has two focal ratios, wide-field with 68 mas/pixel for a wide field and high-res with 41 mas/pixel for high angular resolution. In the high-res configuration, the detectors resolve the diffraction limit. The detectors are HAWAII-2 arrays, (HgCdTe Astronomical Wide Area Infrared Imagers with **2**048x2048 pixels). The instrument is cooled with liquid nitrogen.

The symmetrical design minimizes flexure. The optics and cryostat for nitrogen (Figure 13) bolt on the top and bottom plates of the cryo-optical box (COB) (Figure 14). As the Nasmyth port turns to compensate for the rotation of the field, the instrument turns along an axis perpendicular to those plates. Since the optics are midway between the top and bottom plates and gravity is parallel to these plates, flexure cannot move the image toward or away from these plates.



Figure 12: Spartan Camera. The bathtub (lower part) and the vacuum lid (upper part) bolt together at the flange. The inside of the instrument attaches mechanically, electrically, and plumbingly to the bathtub only; the lid lifts off freely.

The connections to the inside of the instrument are all with the bathtub of the vacuum enclosure (Figure 12). The vacuum lid mates to the bathtub at a flange to complete the vacuum enclosure. The COB attaches to the bathtub through four A-struts (Figure 14), which are made of G-10 fiberglass, a stiff, insulating material. The electrical connections and nitrogen plumbing also attach to the bathtub. Therefore the vacuum lid lifts off freely during disassembly.

The instrument attaches to the instrument selection box (ISB) on the telescope through three Flamant transitions. The Flamant transition is a semicircular plate that allows movement to compensate for the difference in thermal expansion of the aluminum instrument and steel ISB.

A.1 Optics

The optics image the curved, focal surface of the telescope onto the detector. A collimating mirror collimates the light and images the primary onto a stop. A focusing mirror focuses the light onto the detector. A plano-convex lens near each detector flattens the field. The mirrors are off-axis to avoid blocking the beam. There are two focal ratios. To switch between the two focal ratios, rotation stages move the high-res collimator and the wide-field focusing mirror move in or out of the beam. Two fold mirrors make the system more compact.

Two filter wheels allow a large number of filters. The little filter wheel is at the image of the primary mirror of the telescope. For the K band, where the Lyot stop must be accurate to block thermal radiation, the Lyot stop must be in the little wheel and filters must be in the big wheel. For other bands, the filters may be placed on the little filter wheel.

A mask wheel at the telescope focus holds the field stops and masks for coronagraphy or slits for spectroscopy.



Figure 13: Optical schematic oriented with the front of the instrument down and the top toward the viewer



Figure 14: Cryo-optical box inside the bathtub of the vacuum enclosure

A.2 Vacuum & cooling

The vacuum enclosure consists of a bathtub and lid, which mate at a flange visible in Figure 12 & Figure 14.

The vacuum plumbing (Figure 15) has a pumping port, which is Conflat with a quik-connect adapter.

The poppet valve is a safety relief. It opens if the internal pressure becomes high, as would be the case if the charcoal getter warms and releases the nitrogen and oxygen adsorbed from a large leak.

The vacuum gauge is an Inficon BP400 Bayard-Alpert Pirani. According to the manual,⁴ "The gauge functions with a Bayard-Alpert hot cathode ionization measurement system (for $P < 2.0 \times 10^{-2}$ mbar) and a Pirani measurement system (for $P > 5.5 \times 10^{-3}$ mbar). In the overlapping pressure range ..., a mixed signal of the two measurement systems is output. The hot cathode is switched on by the Pirani measurement system only below the switching threshold of 2.4×10^{-2} mbar (to prevent filament burn-out). It is switched off when the pressure exceeds 3.2×10^{-2} mbar."





The actual pressure *P* and pressure reading P_R are related by $P = CP_R$. For N₂ and O₂, C = 1. C = 2.4, 5.9, and 4.1 for H₂, He, and Ne, respectively. The conversion is nonlinear for P > 1 Torr. See the manual for more information.

A cryogenic charcoal getter pumps oxygen, nitrogen, and argon, which permeate through the Viton o-rings. The coconut charcoal is glued on the nitrogen cryostat. The charcoal getter should keep the pressure low for more than a year. Charcoal releases adsorbed gases when warm. It does not need to be baked: unlike zeolite, charcoal does not bond to water.

Liquid nitrogen cools the instrument. The cryostat holds 7 L of nitrogen independent of rotation along an axis perpendicular to the top, which is the rotation axis of the instrument on the telescope. The nitrogen can be forced out if the instrument is oriented with the filter port facing down.

Several design features control the heat load. A multilayer insulating (MLI) blanket reduces the thermal radiation by a factor of about 100. The MLI consists of 10 layers of single-sided aluminized polyimide. A thermal reflector reduces the solid angle of thermal

⁴Inficon, 2002, Operating Manual, BPG400 Bayard-Alpert Pirani Gauge

radiation from the window. The G-10 struts have low conduction. The flexible cables that connect the cold detector and warm electronics have very low cross section and therefore low conduction. The motor wires run on a board with thin traces, which reduce conduction.

Because the window radiates into about 0.9 steradian of cold, it may cool below the dew point on very humid days. Some nitrogen boil-off, after warmed in a length of pipe, blows on the window to purge the surrounding air of water.

A.3 Electronics and cabling

The electronics are in several places. The block diagram and cables are in Figure 16 and Table 6.

- Inside the vacuum are detector printed circuit boards (PCB) and a motor PCB. The motor PCB is a thermal insulator and a fan-out.
- On the instrument outside the vacuum is an electronics box, which contains the detector controller PCBs.
- In the cooled electronics rack (up to 7 m from the instrument) are two motor drivers (NI MID-7604), the umbilical PCB, and the computer.
- Inside the computer are two motor controllers (NI PCI-7344) and a data card (NI PCI-DIO-32HS) for communicating with the umbilical card.



Figure 16: Cabling schematic



A.4 Software

To start the software, run \homeSpartan\SpartanGUI, and the window in Figure 17 should appear. The software has several components, which are described briefly here.

SOAR <u>telescope</u>	Spartar		era tatus PictsFree dle 0	MICHIGAN STATE UNIVERSITY
Observing Setup SimulateInstrument NO Initialize Detector Cont Enable Detectors Sync detectors Initialize Mechanisms Test Home Position of Find Home Position of		Glossary Instrume	htLog Help Detector PlugIn FITS_Set PlugInsToS FITS_Set	us rver Idle itartup
Notebook Show C	Contexual Help		Put Off Line	Abort Stop

Figure 17: SpartanGUI, which is the main window of the software

For a more complete description, see Spartan software manual.

SpartanGUI is the user's control panel. In normal operation, the observer need only look at this window. Status information is in the top section. The observing functions

are in the observing panel. The notebook maintains a record of the observations; the observer can log comments in the notebook.

SpartanGUI has several panels:

- **Observing** is for the observer. The observer presses buttons on SpartanGUI to set exposure time, take pictures, change filters, switch between wide-field and high-res modes.
- **Setup** is to setup the detector and the mechanisms. The operations are (1) choose the detectors, (2) load the operating voltages for each detector, (3) initialize the mechanisms, (4) test the home positions of the mechanisms, and (5) find and store new home positions. The parameters that are unlikely to need changing are in a tab control, the two tabs of which are named Detector and PlugIn. Select the button SimulateInstrument to run without any hardware.
- **forMechanismEngineer** is for monitoring the mechanisms and more detailed control of the them. Normally, the mechanisms move by the amount needed to change the optics, an example of which is the 20° to move between filters. This panel allows movement by steps of 0.002°.
- **Glossary** contains definitions of terms, an optical schematic, and a map of the detector layout.
- **InstLog** maintains a record of mechanism movement and unexpected problems. The observer may add comments that will help diagnose problems.

Help

- **CameraControl** controls the detector. It sends commands to the detector controller cards and receives status and images from them.
- **MechanismInitiation** initializes the mechanisms by initializing the motor controllers and reading the locations of each mechanism from files on the disk.
- **MechanismHoming** locates the reverse limit of a mechanism in order to test or set its home position.
- **MechanismMoving** moves the mechanisms.
- **PGauge** reads the Inficon pressure gauge.
- LogTempPressure maintains a log of the temperatures at several points in the instrument and the pressure inside the instrument.

Telescope Link communicates with the observatory control system (OPEX). SpartanServer receives commands from OPEX and passes them on to StartanGUI. In addition, it send status to OPEX.

TUI Link communicates with the text-based user interface.

StartanTUI is a text-based user interface. It may run on a remote computer.

In order to reduce clutter, most of the VIs run without a visible window. To make a VI visible, use the Window menu of SpartanGUI.

A.4.1 Volatile data

Volatile data are the mechanism positions and the current image ID. The data are stored in these files, whose path is in the entry volatileDataPath in the configuration file spartan.txt.

- **mech0.txt-mech5.txt** Before moving mechanism 0, the flag "moving" is written to the file mech0.txt to indicate that the mechanism position is changing. After finishing a motion, the flag is erased and the new position is written to the file. Thus the position of the mechanism and whether the position is accurate are both stored on disk to ensure safe recovery from a crash. Each mechanism has its own file.
- **image ID.txt** contains the serial number of the last image. The image ID is used as part of the name of the image, and it must be unique.

A.4.2 Software configuration

These files, which are in \homeSpartan\Configuration, contain configuration information.

- **spartan.txt** has computer-specific paths. An example is in Table 7. The format is that of Windows configuration files. The line in brackets specifies the IP number of the computer to which the following information applies.
- **defaultOptic.vi** (Figure 18) contains the default mechanism positions for the high-res and wide-field observing channels.
- **mechanismParameter.vi** (Figure 18) contains the operating information for the mechanism, which are the controller and axis number to address the mechanism, the maximum position (counting from 0), the number of steps per position, whether to

Table 7: Example configuration. Note: the first slash is translated to a colon; *e. g.*, the entry C/home Spartan/instLog translates to the path C:home Spartan/instLog.

[default] computerName="unknown" imagePath="/C/images" volatileDataPath="/C/data" observingLogPath="/C/obsLog" instrumentLogPath="/C/instLog" [35.10.222.84] computerName="horolog4" imagePath="/C/images" volatileDataPath="/C/home Spartan/data" observingLogPath="/C/home Spartan/ObsLog" instrumentLogPath="/C/home Spartan/InstLog" [35.9.70.129] computerName="sextans" imagePath="/E/images" volatileDataPath="/C/data" observingLogPath="/C/obsLog" instrumentLogPath="/C/instLog"

compensate for backlash, the offset from the index to the 0-th position, whether the mechanism is a wheel (and therefore the last position is adjacent to the first), and the serial number of the rotation stage. You must access the block diagram to make changes.

- filterBalance.xls is a spreadsheet for figuring out where to put filters to balance the wheels.
- **SpartanToWheelNames.vi** (Figure 18) contains the correspondence between the mechanism positions and names of the optics.
- **detectorSetPoint.vi** contains information about the detectors, namely the serial number, location, and operating voltages.
- **initDatabase.vi** contains information on the observatory, time system, equinox, and versions of the hardware and software.
- hdr-obs.txt contains the FITS key words that are implemented.
- soar_commsXXX.txt contains IP addresses of TUI Link, the text-based server, Spartan TUI, the text-based client, and Telescope Link, the server that provides information about the state of the telescope. (The observer types commands on the client which are sent to the server for execution.) XXX is the name of the computer. This is an example:

[Spartan] IP_Server=35.10.222.145 IP_Client=35.9.2.14 IP_Port=30040

[AOS] IP_Server=139.229.3.100 IP_Client=139.229.3.217 IP_Port=5679

TUI Link must run on the same computer as SpartanGUI. StartanTUI may be on a remote computer.

The server enforces security using the IP address of the client. The IP address of the client must be in the configuration file when the server starts; otherwise the server will not open a communications link with the client.

			Mechanism isCold
	"make current value defaul .owRes	-1	Param Name bigFilterWheel Controler 1 Axis 1
stop 6 mask 3 f12Cam 1 f21Coll 0	stop 0 mask 0 f12Cam 0 f21Coll 1		MaxLoc 17 Steps/Posn 10000 Backlash
You must "save as de	the residents change. efault" to keep changes.	Filter 0 1 2	
f12Cam LowRes HighRes f21Coll HighRes LowRes	Lyot 0 LRLoose 1 Dark Slide 2 2 3 3	3 4 5 6 7	3 4 5 6 7
Mask 0 LROpen 1 HRMasked 2 LRMasked	4 S. PH Cam 5 HRTight 6 HRLoose 7 7	8 9 10	8 9 10
3 HROpen	8 L. PH Cam 9 9 10 LRTight	11 12 13 14	11 12 13 14 15
		16 17	16 17

Figure 18: VIs, defaultOptic (top left), mechanismParameter (top right), and SpartanToWheel-Names (bottom), for configuring the instrument.

B Other Documentation

Spartan documentation

- Spartan maintenance manual Loh, E., 2006.
- Spartan observing manual Loh, E., 2006.
- Spartan software manual Loh, E., 2006.

Vendor documentation

- Inficon pressure gauge Inficon, 2002, Operating Manual, BPG400 Bayard-Alpert Pirani Gauge, www.inficon.com.
- NI digital input/output card National Instruments, 2001, 653X User Manual, www.ni.com.
- NI motor driver National Instruments, 2001, MID-7604/7602 Power Drive, www.ni.com.
- NI motor controller National Instruments, 2001, 7344/7334 Hardware User Manual, www.ni.com.
- **Prismatics motor driver** Prismatics, 2005, MDM2200 Reference & Maintenance Manual, www.prismatics.com