



CMX Rear Stiffener Bar

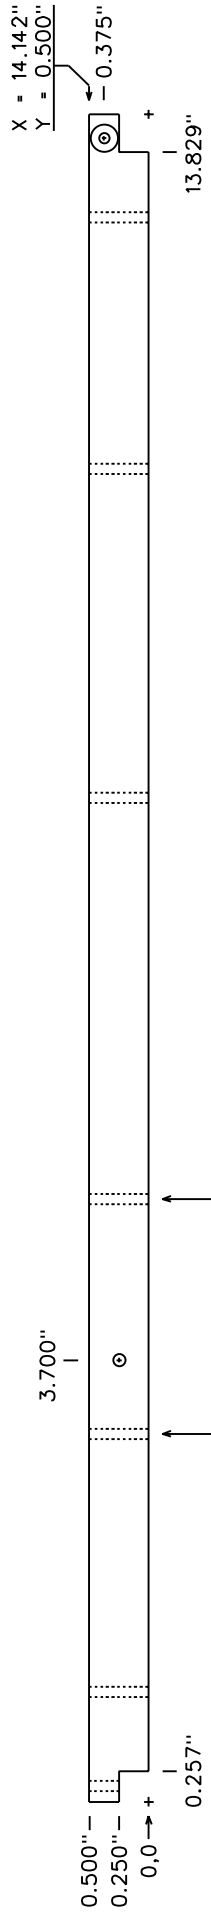

Drill and tap for 4-40 screws - 7 places
 4-40 screws enter from this side
 Good threads for 0.300" into the bar



Drill and tap for 6-32 screw - 1 place

Body drill and countersink for 4-40 flathead screw - 1 place