

Understanding Fiber Polarity

1. What's Polarity?

In any installation, it is important to ensure that the optical transmitter at one end is connected to the optical receiver at the other. This matching of the transmit signal (Tx) to the receive equipment (Rx) at both ends of the fiber optic link is referred to as polarity.


2. Polarity Overview

Two types of fiber links are outlined in the TIA standard: serial duplex signals connections and parallel signals connections. This paper discusses the impact of polarity as it pertains to serial duplex signals and parallel signals.

2.1 Fiber Patch cords

Two types of duplex fiber patch cords are defined in the TIA standard: A-to-A type shown in Figure 1 and A-to-B type shown in Figure 2.

Note: A-to-A patch cords are not commonly deployed and should be used only when necessary as part of a polarity method (See ANSI/TIA-568-C.0).

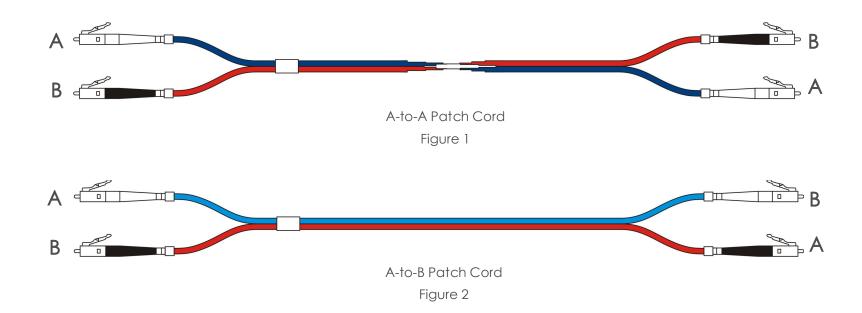




2.2 MTP/MPO Fiber Adapter


2.2.1 Type A adapters

There are two types of array adapters, Type A and Type B. Type A adapters shall mate two array connectors with the connector keys key-up to key-down.

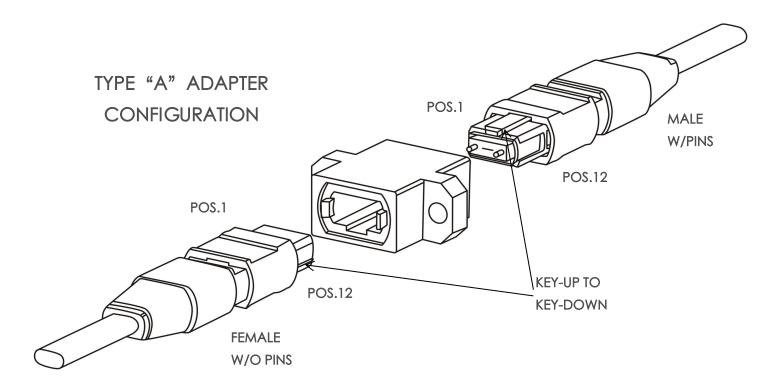

2.2.2 Type B adapters


Type B adapters shall mate two array connectors with the connector keys key-up to key-up (keys aligned).

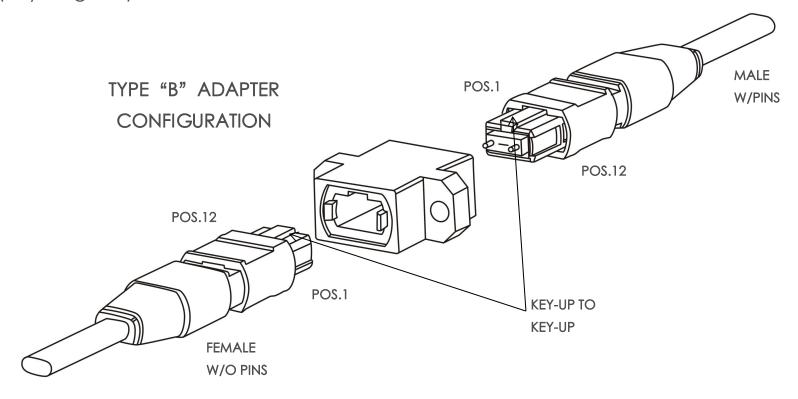





2.3 12-fiber MTP/MPO array patch cord

There are three different 12-fiber MPO/MTP-to-MPO/MTP backbone cables defined in the TIA standard. The three different cables: Type A, B and C are used for the three different connectivity Methods A, B and C respectively.

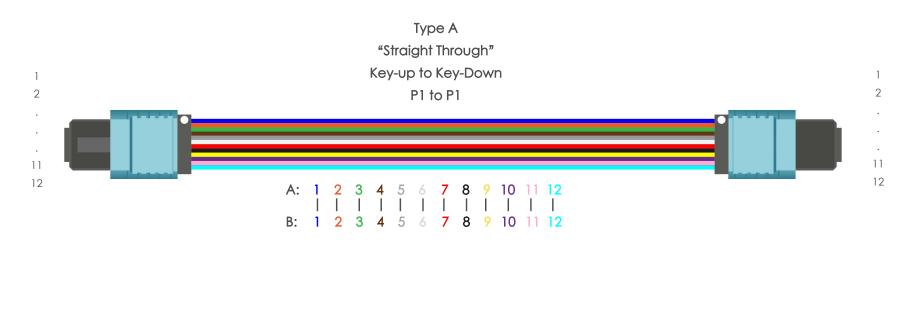

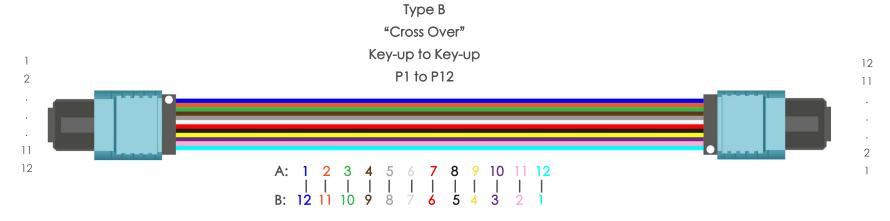


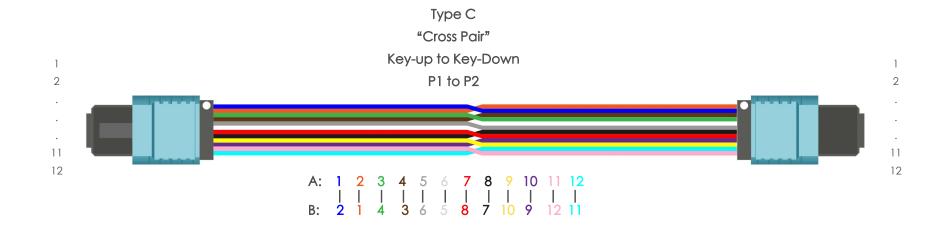



2.4 24-fiber MTP/MPO array patch cord


There are three different 24-fiber MPO/MTP-to-MPO/MTP backbone cables defined in the TIA standard. The three different cables: Type A, B and C are used for the three different connectivity Methods A, B and C respectively.

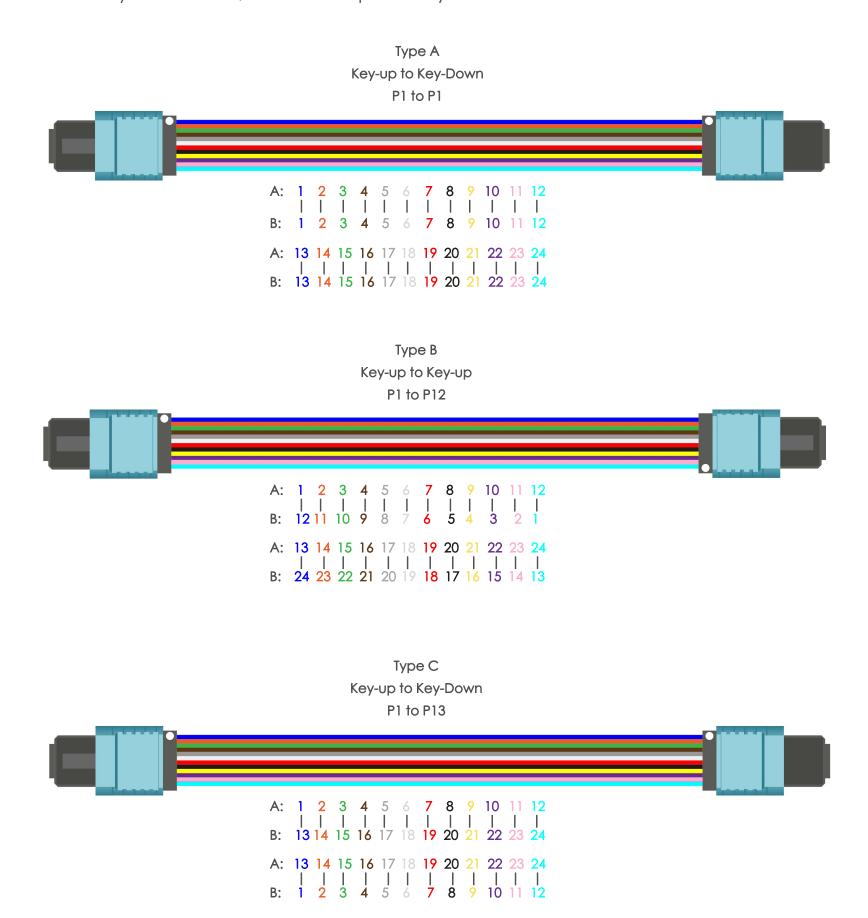




2.5 8-fiber MTP/MPO breakout patch cord

There are two different 8-fiber MPO/MTP breakout cables: Type A and Type B.

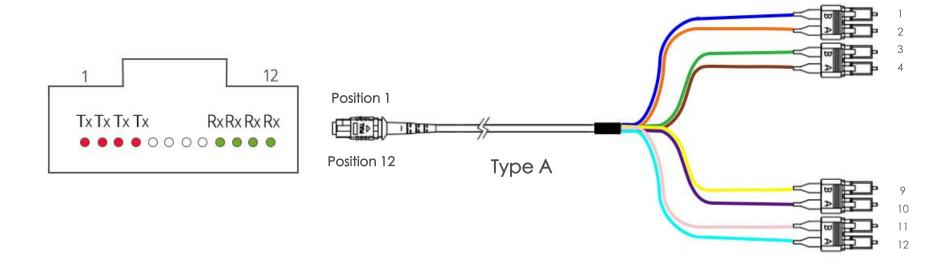


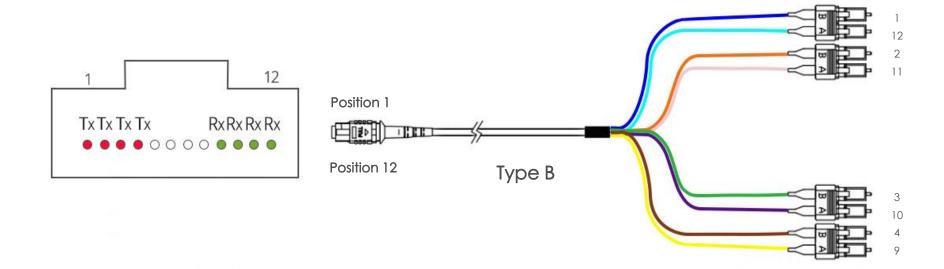




2.6 12-fiber MTP/MPO breakout patch cord

There are two different 12-fiber MPO/MTP breakout cables: Type A and Type B.

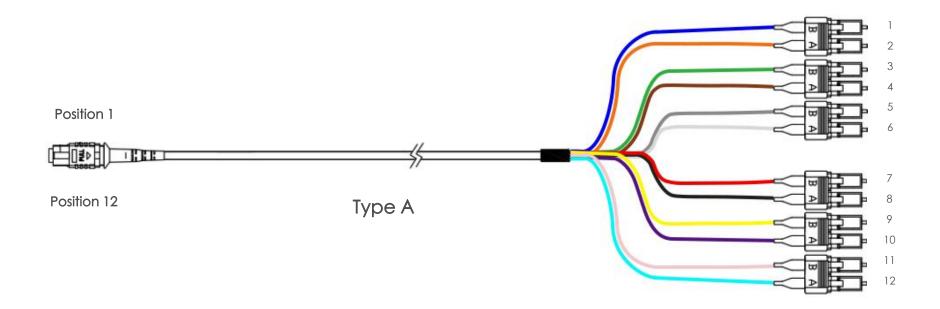


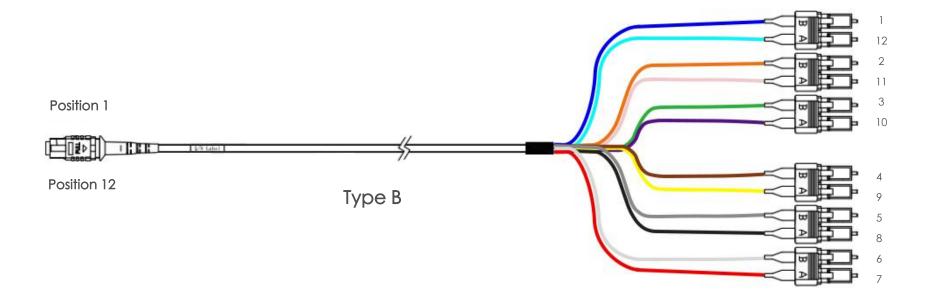





2.7 20-fiber MTP/MPO breakout patch cord


There are three different 20-fiber MPO/MTP breakout cables: Type A, Type B and Type C.

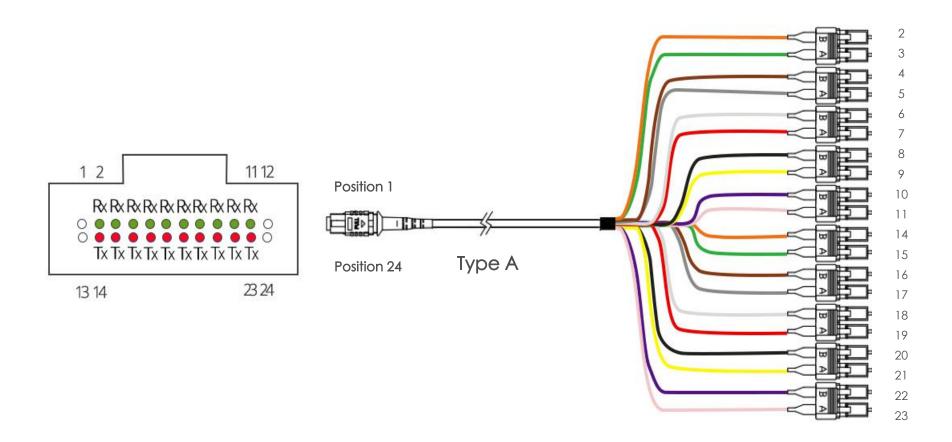

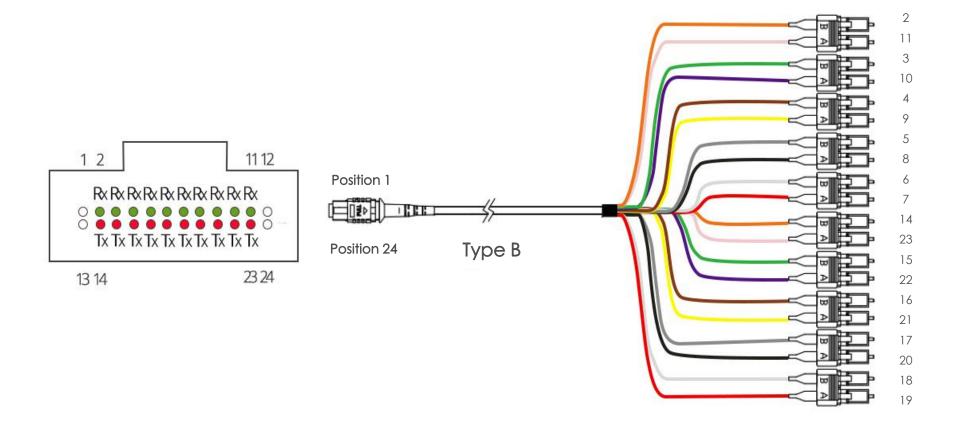


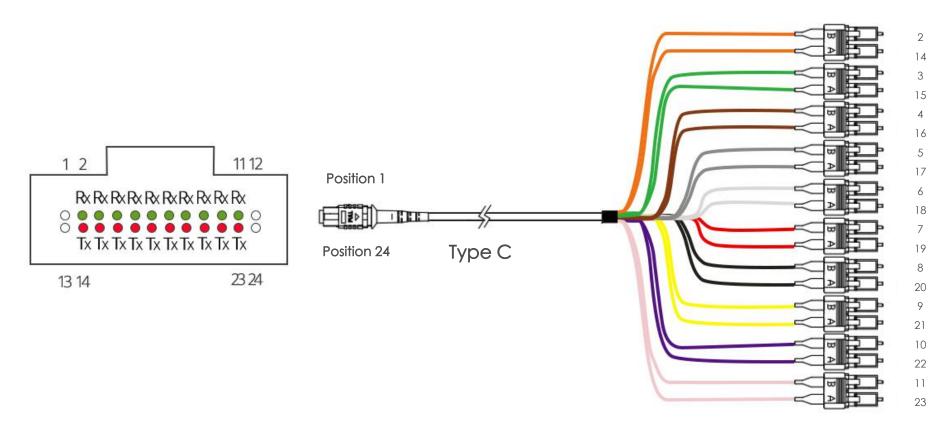

There are three different 24-fiber MPO/MTP breakout cables: Type A, Type B and Type C.

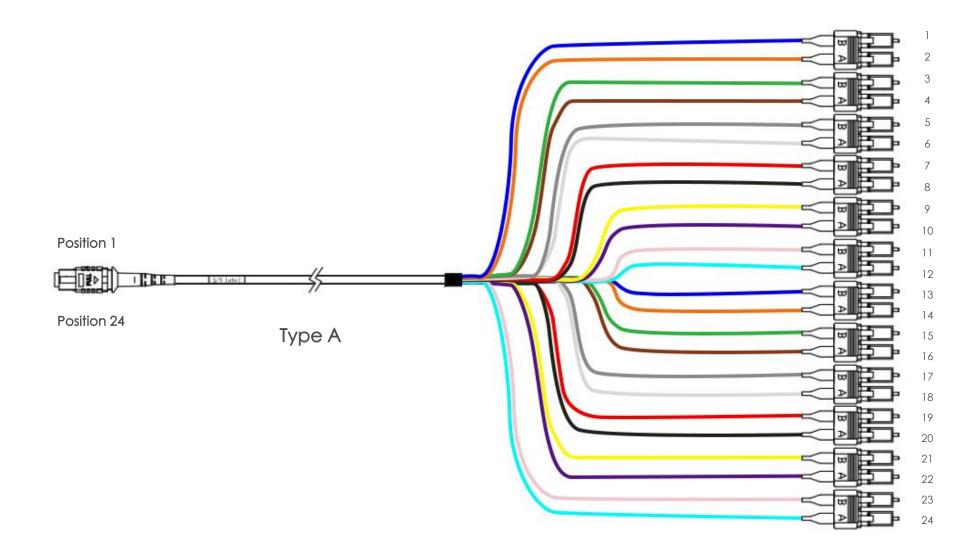




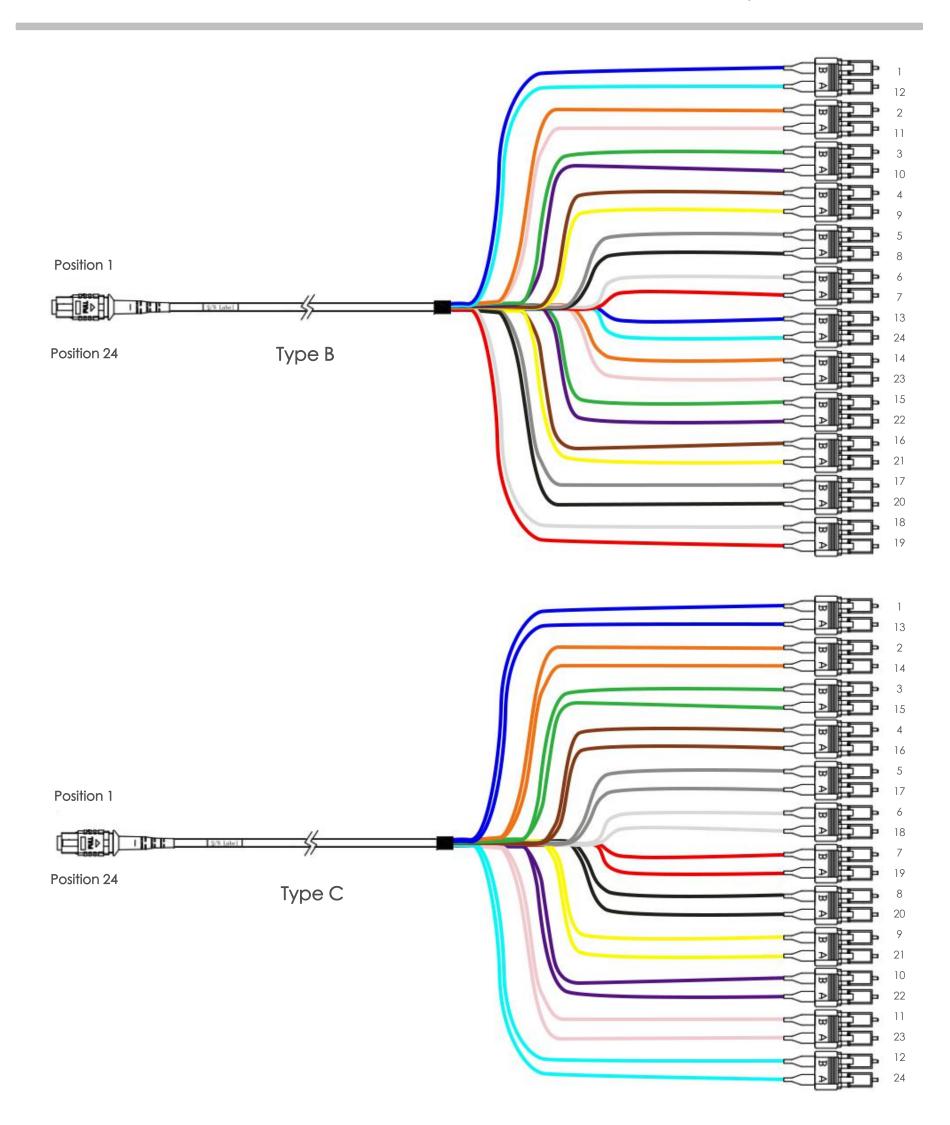




2.8 MTP/MPO cassette modules

2.8.1 Base-8 series

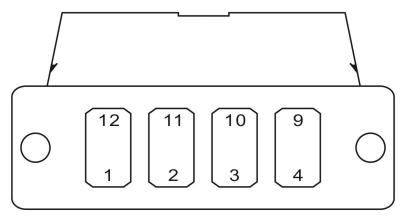

Fiber Sequence

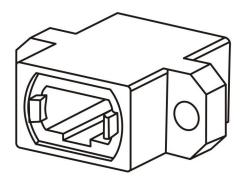

Type A adapter

2.8.2 Base-12 series

There are four different 12/24 Fibers MTP/MPO cassette modules: Type A, AF(Pair Flipped), B1 and B2.

Polarity Type	Inner Fiber Sequence	Adapter
Α	$ \begin{array}{c ccccccccccccccccccccccccccccccccccc$	Type A Up-to-Down
AF	$ \begin{array}{c ccccccccccccccccccccccccccccccccccc$	Type A Up-to-Down
B1	$ \begin{array}{c ccccccccccccccccccccccccccccccccccc$	Type B Up-to-Up
B2	$ \begin{array}{c ccccccccccccccccccccccccccccccccccc$	Type B Up-to-Up



2.8.3 Base-24 series

There are two different 24 Fibers MTP/MPO cassette modules: Type A, and AF(Pair Flipped).

Polarity Type	Inner Fiber Sequence	Adapter
Α	14 16 18 20 22 24 13 15 17 19 21 23 2 4 6 8 10 12 1 3 5 7 9 11	Type A Up-to-Down
AF	$ \begin{array}{c ccccccccccccccccccccccccccccccccccc$	Type A Up-to-Down



3. Array polarity systems

All array connectivity methods have the same goal: to create an optical path from the transmit port of one device to the receive port of another device. Different methods to accomplish this goal may be implemented; however these different methods may not be interoperable.

Any connectivity method requires a specific combination of components to maintain polarity. Some of the components may be common to other connectivity methods. The components associated with the three illustrated array polarity methods A, B and C are given in below tables.

Table 1 – Summary of components used for duplex signals

Connectivity method	Array connector cable Type	Array adapter Type	Duplex patch cord type
А	А	A	One A-to-B & one A-to-A per duplex channel
В	В	В	A-to-B
С	С	Α	A-to-B


Table 2 – Summary of components used for parallel signals

Connectivity method	Array connector cable Type	Array adapter Type	Array patch cord type
А	А	Α	One Type A & one Type B
В	В	В	Туре В




3. 1 Connectivity Method A


3.1.1 Connectivity Method A for duplex signals



Note: If you don't want an A-to-A patch cord used, a TypeAF MTP/MPO cassette is needed, as shown below:

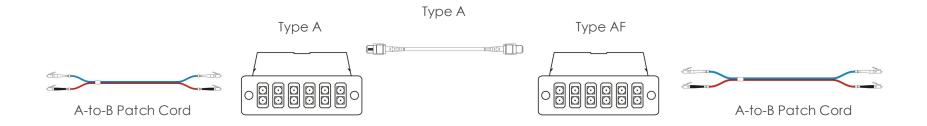

3.1.2 Connectivity Method A for parallel signals







3.2 Connectivity Method B

3.2.1 Connectivity Method B for duplex signals

The Key Up to Key Up (method B) does not support Singlemode with standards compliant connector endfaces.




Note: The transmission of the signal is P1 in and P12 out.

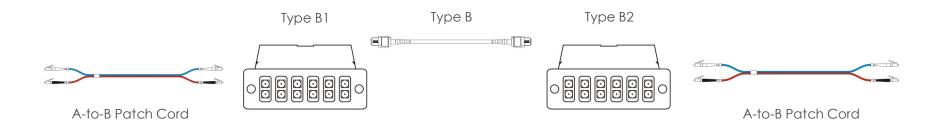


Note: The transmission of the signal is P1 in and P1 out.

Base-8 MTP/MPO cassette used for 10G to 40G/100G migration with Method B.

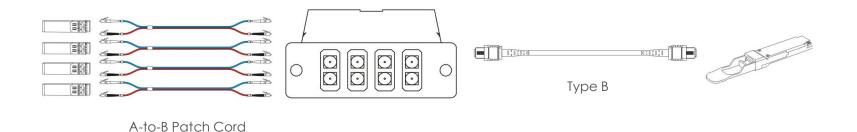




3.2.2 Connectivity Method B for parallel signals

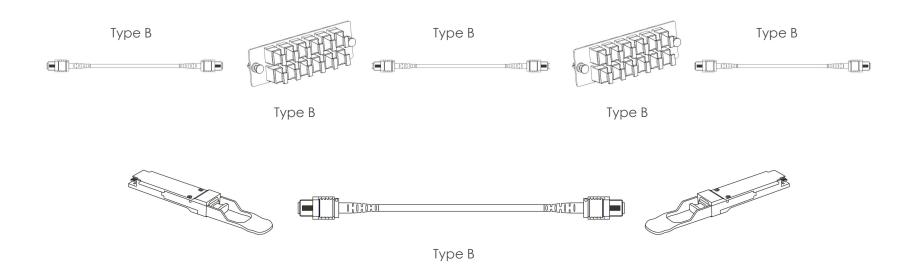


3.3 Connectivity Method C for duplex signals

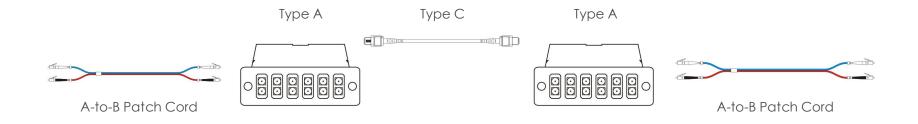




4. Polarity systems of 24-Fiber

The 100G-SR10 (100 GbE over multimode) requires a total of 20 fibers, 10 transmit and 10 receive. Position assignment shown below is recommended by IEEE.

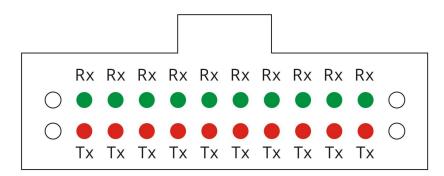

4.1 Connection of Type C 24-Fiber MTP/MPO patch cord

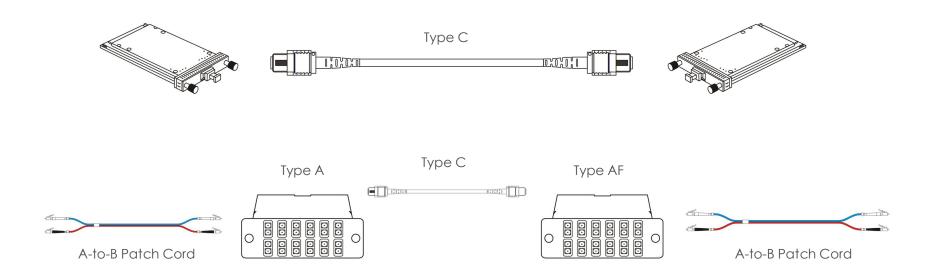





Contact Us

Asia (China)
F3 Building 6/F, Optics Valley
Software Park, Donghu Hi-Tech
Development Zone,
Wuhan, Hubei, China
Tel: +86 (027) 87639823

Europe (Germany)
Building 7, NOVA Neufahrn
Gewerbepark, Am Gfild 7,
85375, Neufahrn bei Freising,
Munich Germany
Tel: +49 (0) 89 414176412

North America (United States) 820 SW 34th Street Bldg W7 Suite H Renton, WA 98057 United States Tel: +1 (877) 205 5306

Europe (United Kingdom) Third Floor 207 Regent Street London, W1B 3HH United Kingdom Tel: +44 (20) 3868 2768

Addresses, phone number and fax number also have been listed at www.fs.com. Please e-mail us at tech@fs.com or call us for assistance.

All statements, technical information, and recommendations related to the products here are based upon information believed to be reliable or accurate. However, the accuracy or completeness thereof is not guaranteed, and no responsibility is assumed for any inaccuracies. Please contact FS for more information.