Front Panel MDR Holes



X = 0.396"
Y = 7.1545"
Top Right Corner

0,0
Reference Point

X = -0.392"
Y = -7.1545"
Bottom Left Corner

MDR Rectangular Hole Size:

0.320" in X by 2.134" in Y

with a 4-40 body drill located 1.140" above and below the center of the rectangular hole.

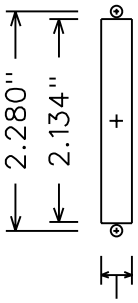



Instead of holes slots may be used if that is easier to machine.

Centers of MDR Patterns:

X= -0.048", Y= +1.482"
X= -0.048", Y= -1.136"

Reference point is in the center of a line between the two holes near the ends of the blank front panel.

The flat external surface is shown UP.

Rev. 15 Nov 2013